


KNIGHT SINGLE DESK

Assembly Instructions

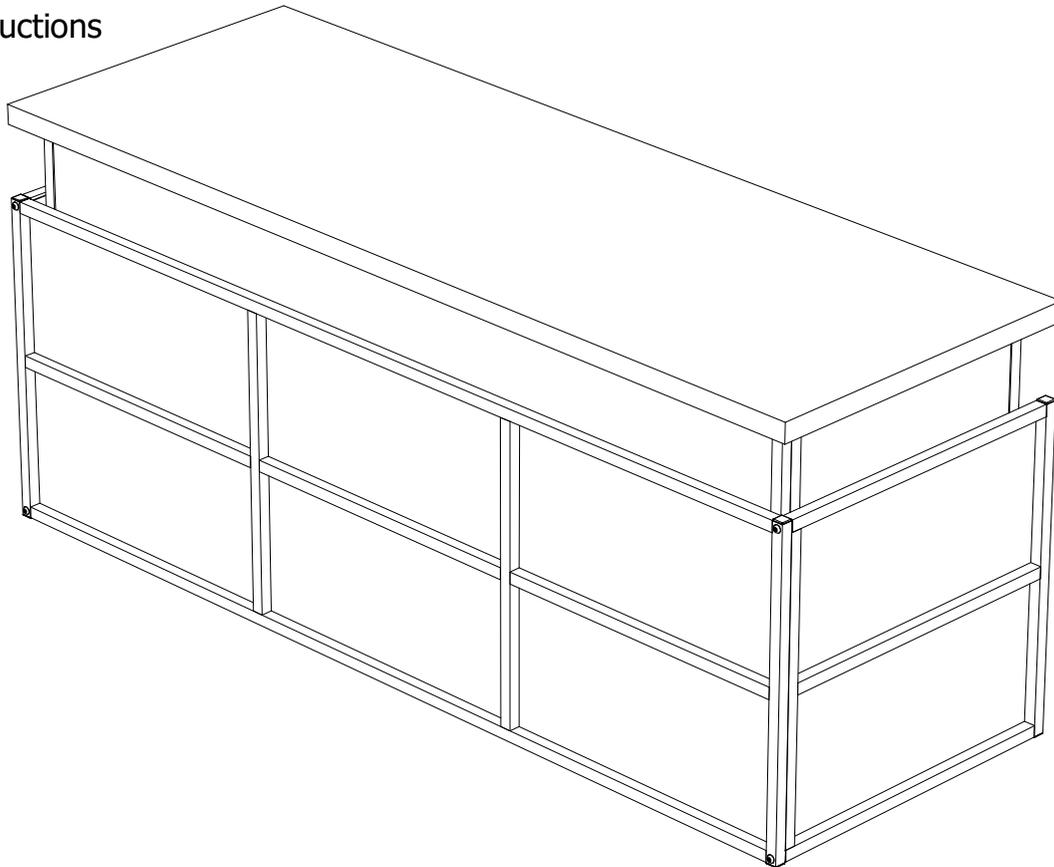

Thank you for your purchase!

Iron Age Office furniture is uniquely and individually fabricated. For this reason, your furniture is pre-assembled and labeled before shipping. Labels are marked on the underside of the furniture. The furniture is then deconstructed prior to shipping. Pieces that uniquely correspond can typically be found on the same pallet.

Assembly is best completed by keeping the pieces that correspond together. Clear your work area of anything that could scratch furniture surfaces. If possible, cover your work area with a clean, soft blanket. Carefully flip any wooden tops over and inspect the bottom sides for markings. Match legs, flat brackets, etc. to the appropriate labels.

If you need further assistance of any kind,
please contact:

Iron Age Office Operations Manager

Henry Dover

678-725-1473 (c)

hd@ironageoffice.com


HARDWARE

Screws are shown actual size. You may receive extra hardware with your unit.

Tools Required

①

14-10 LAG BOLTS
QTY: 9

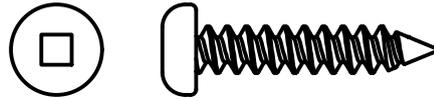

#3 Square Drive

⑧

1/4-20 BOLT
QTY: 2



5/32 Hex Drive

⑨


1/4-20 NUT
QTY: 2



7/16 Crescent Wrench


⑩

3/8-16 x 2 BOLT
QTY: 4

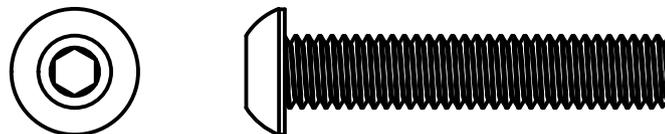

7/32 Hex Drive

PARTS

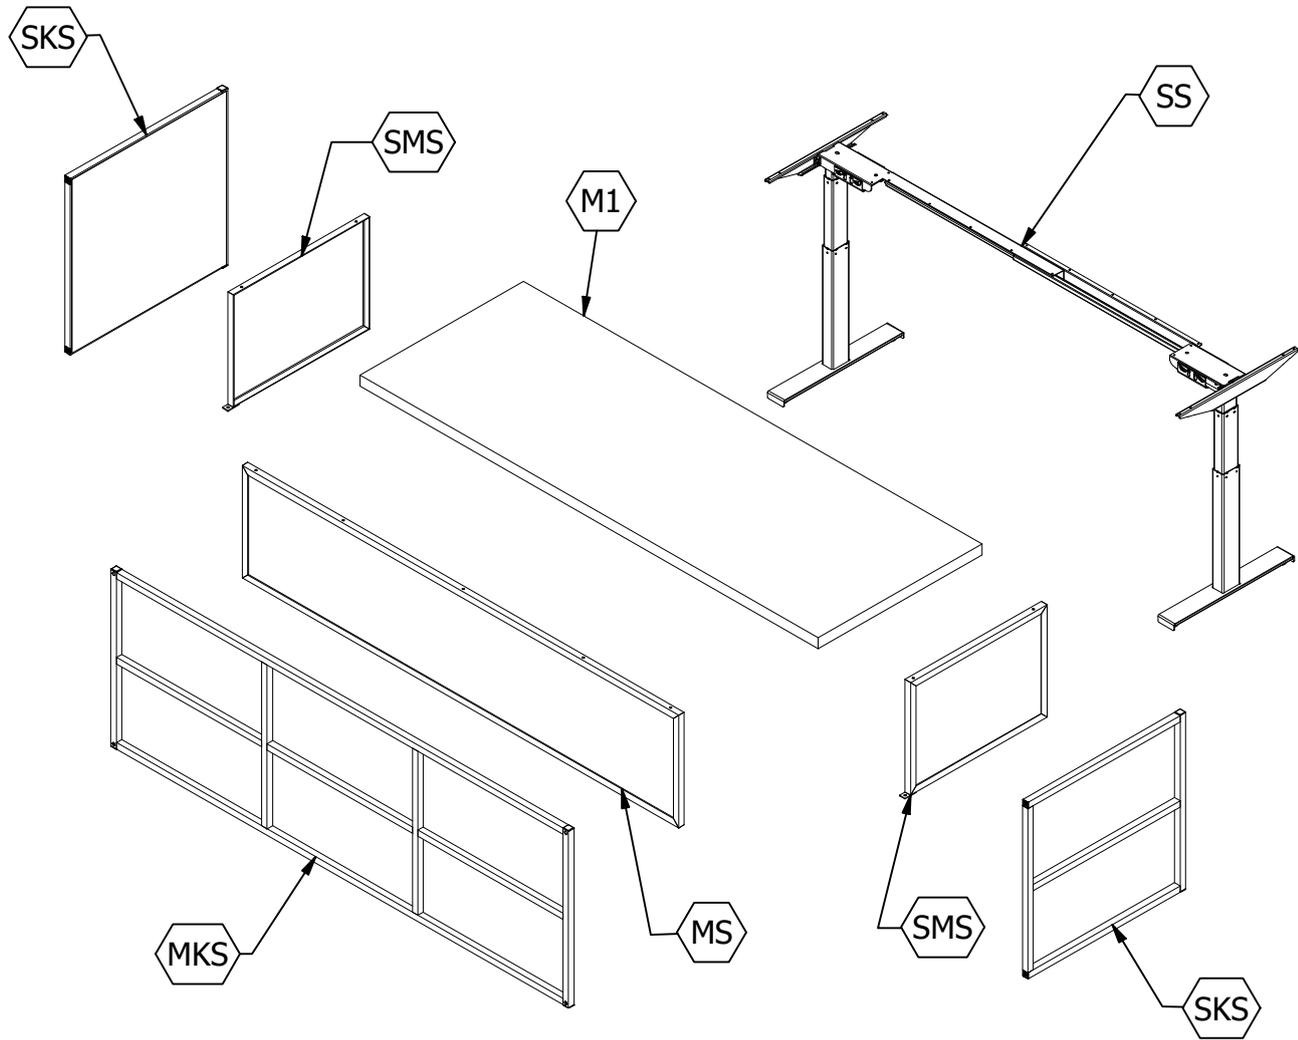

M1 MAIN TOP

SMS SIDE MODESTY SCREEN

SS SIT STAND BASE
*Instructions and hardware included
in LINAK packaging.

MKS MAIN KNIGHT SHELL


MS MODESTY SCREEN

SKS SIDE KNIGHT SHELL

ASSEMBLY


STEP 1

Place wood top face down on a clean surface.

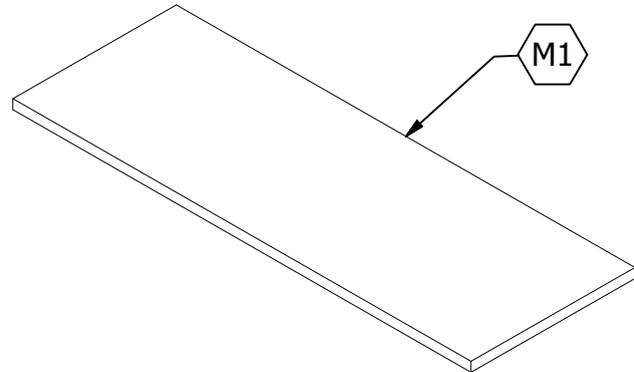


STEP 2

Assemble sit stand base according to package instructions. Align legs to wood top using markings on the underside of main top.

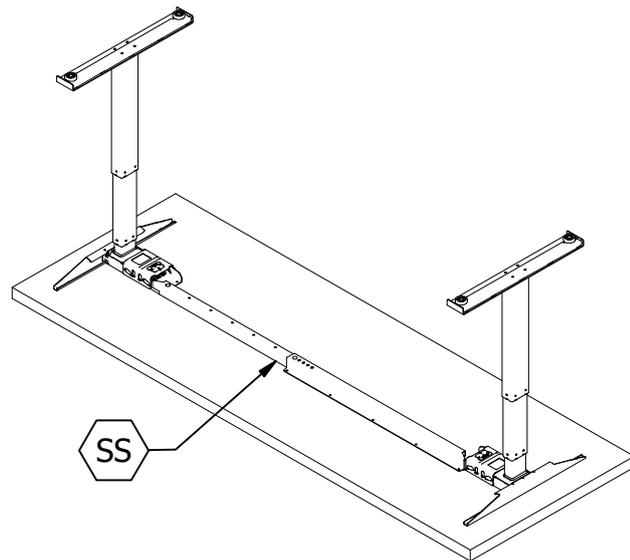


STEP 3

Align side modesty screen to main top using markings on the underside of top. Secure screen to desk with (2) lag bolts.

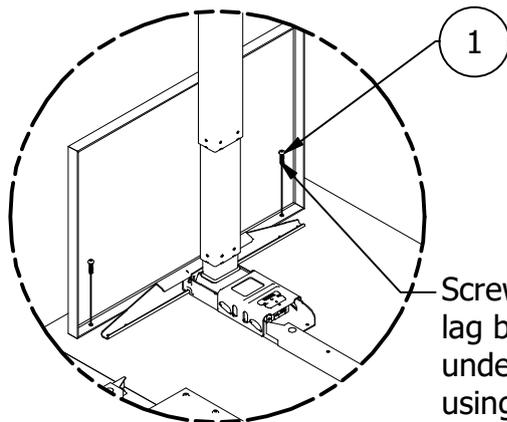



Screw in (2) 14-10 lag bolts into screen on the underside of the top using a #3 square drive.

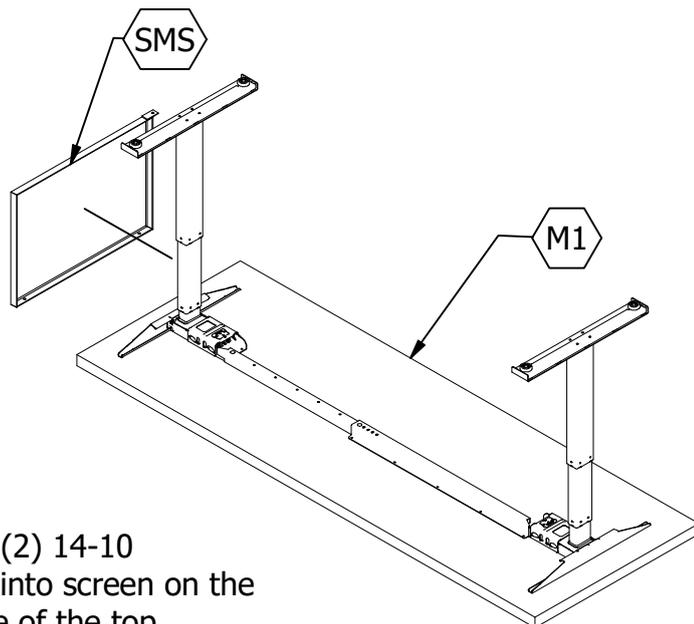

ASSEMBLY

STEP 4


Align main modesty screen to main top using markings on the underside of top. Secure screen to desk with (5) lag bolts using a #3 square drive. Secure main screen to side screen with 1/4-20 bolt and nut.

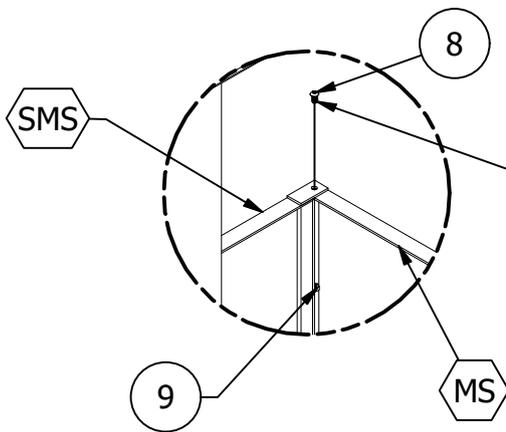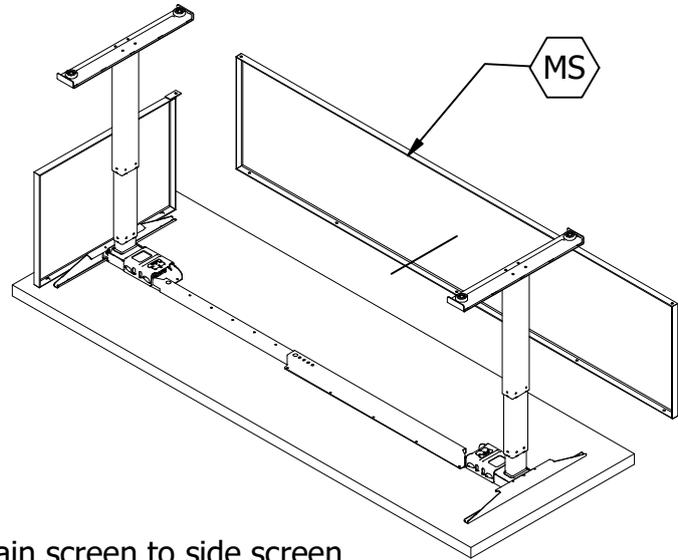

Secure main screen to side screen with (1) 1/4-20 bolt using a 5/32 Hex Drive. Secure bolt with (1) 1/4-20 nut using a 7/16 Crescent Wrench.


STEP 5

Align side modesty screen to main modesty screen and top using markings on the underside of top. Secure screen to main top with (2) lag bolts. Secure side screen to main screen with 1/4-20 bolt and nut like step 5.

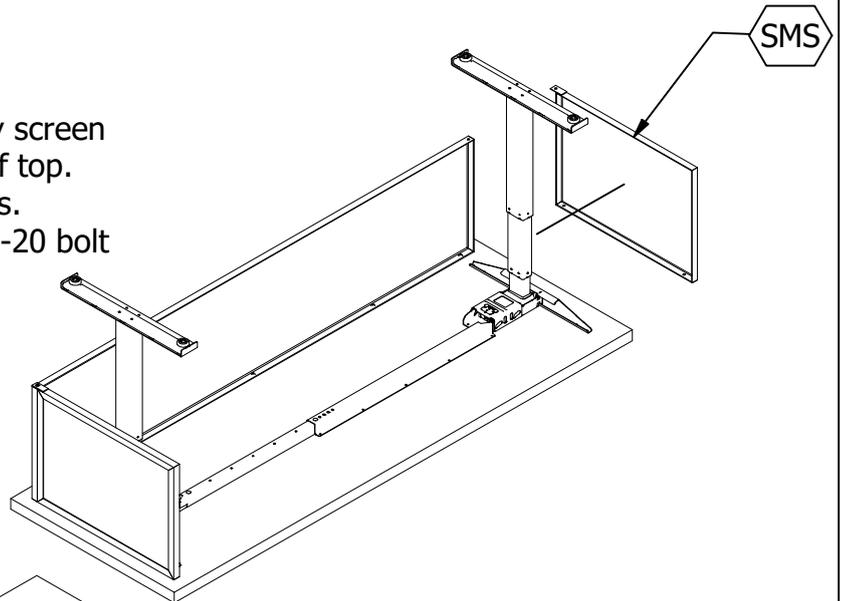

STEP 6


Flip desk to an upright position.

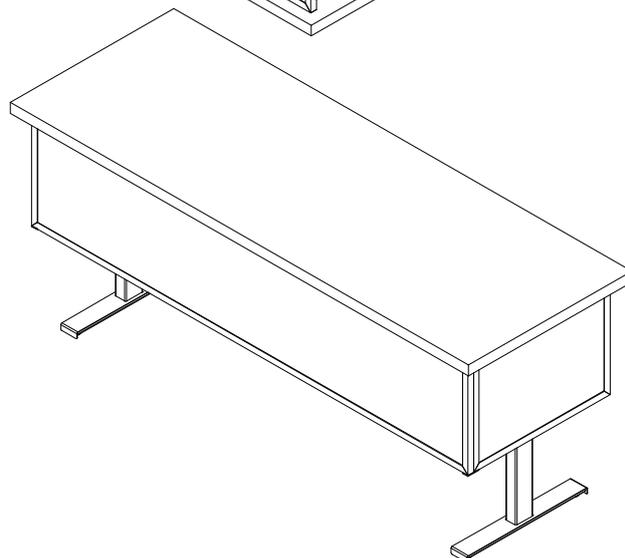


ASSEMBLY

STEP 7

Align main and side knight shells to desk. Secure together with (2) 3/8-16x2 bolts.

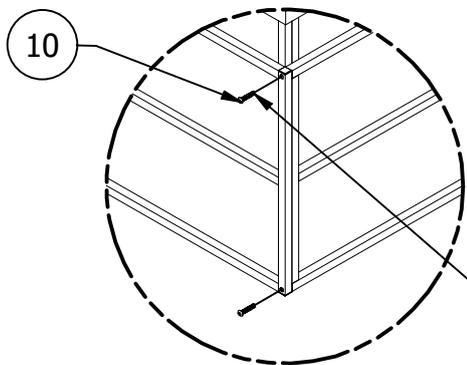


Secure main shell to side shell with (2) 3/8-16x2 bolts using a 7/32 Hex Drive.

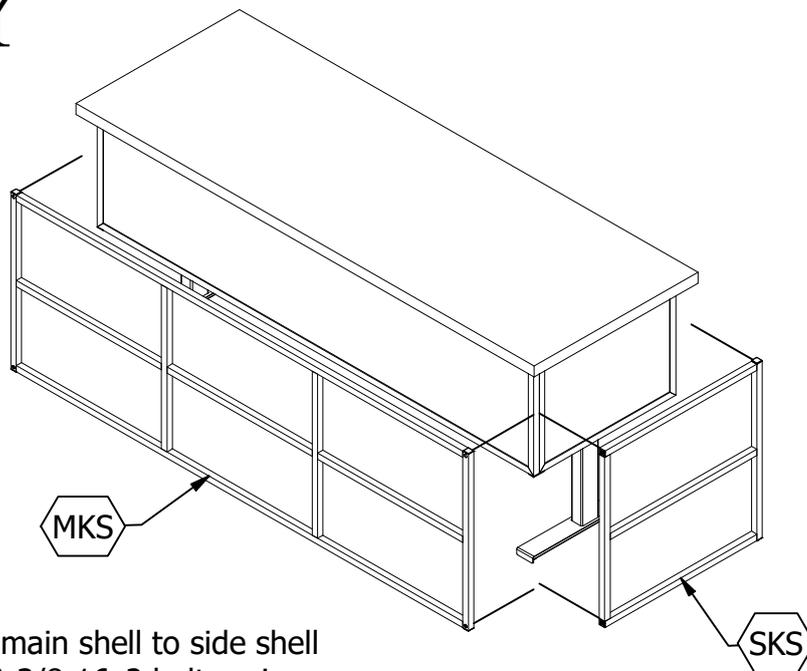


STEP 8

Align side shell to main shell and secure with 3/8-16x2 bolts like step 8.

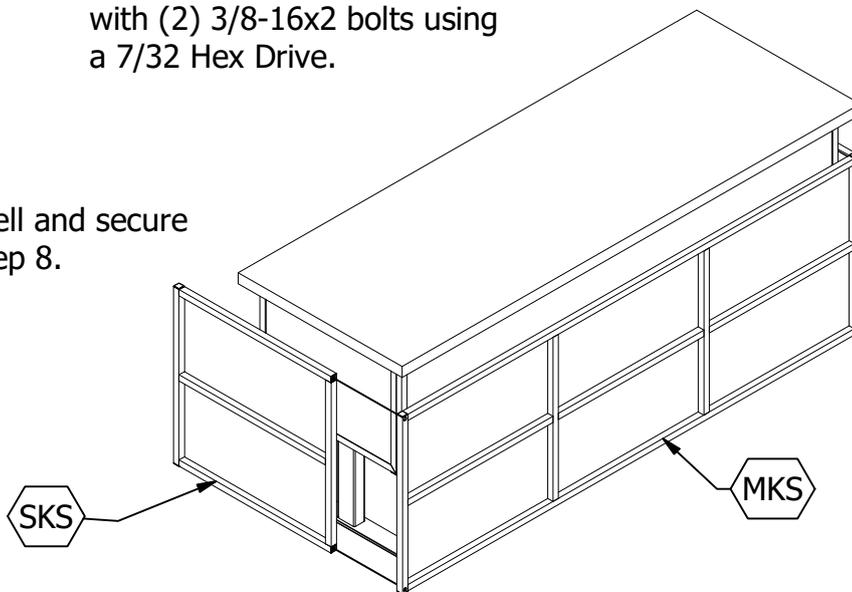

STEP 9

Enjoy your desk!

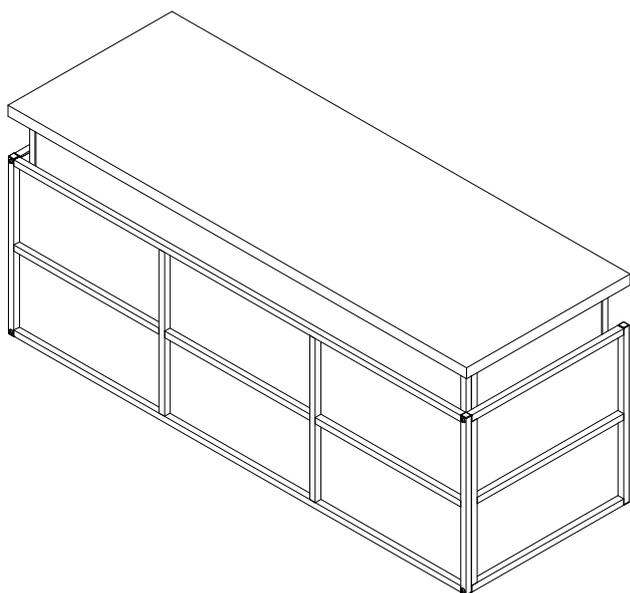

CARE INSTRUCTIONS

To care for either wooden or metal surfaces of Iron Age Office products, gently wipe with a soft cloth dampened with water and a mild dishwashing liquid. Once satisfied, dry with a soft cloth.